

## ***The Heat Inside***

### ***StormWalker* HEATED JACKET/VEST USER INSTRUCTIONS**

#### **WELCOME**

Your high performance StormWalker heated jacket/vest has been designed to provide you with warmth where and when you need it, whatever the weather.

The novel heating system is based on FabRoc™, a revolutionary material invented for use in the aerospace industry that is extremely efficient in generating heat from a low voltage source. FabRoc™ panels are sewn into your StormWalker to provide direct heat to your body in certain key areas that will transfer warmth throughout.

StormWalker FabRoc™ panels are pre-set to a maximum surface temperature of 110°F. It is not possible to 'overheat' FabRoc™ as it automatically uses less power as it reaches its operating temperature, a unique property that ensures the material is intrinsically safe.

 


#### **PRODUCT CONTENTS**

- exo<sup>2</sup> StormWalker heated jacket or vest
- Fused Power Unit Cable
- FabRoc™ panels sewn into the garment
- Portable battery pack (Optional Accessory)
- Battery charger & power cord (Optional Accessory)

## USING THE BATTERY

1. Remove the connecting cables from the pocket.
2. Insert the small 1.3mm DC plug into the battery socket marked 'heater'.
3. Use the **ON / OFF** switch on the battery pack to control the heat output.

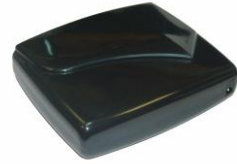

## CHARGING THE BATTERY

1. Remove the battery pack from the jacket/vest.
2. Connect the charger unit to the battery socket marked 'charger'. (The charger should be connected to the battery before inserting the power cord into the wall outlet).
3. Plug the charger into the wall outlet.
4. **DO NOT CONNECT THE CHARGER UNIT TO THE BATTERY WHILE THE BATTERY IS CONNECTED TO THE JACKET/VEST.**

 
The red light on the front of the charger will light up when the battery is being charged. Depleted battery packs will take approximately 3 hours to fully recharge. When the battery is completely charged, the system allows no further current to enter the battery. When fully charged, the red light will turn to green.

The charger unit supplied has been chosen specifically for the exo<sup>2</sup> battery packs. **No other charger should be used. The use of any other charger unit is dangerous, may cause injury and will void the warranty.**

## GETTING THE BEST RESULTS

Although the battery has been charged and checked, we recommend that you charge it for at least 3 hours prior to first use. The closer the FabRoc™ panels are to your skin, the more heat you will feel. For maximum benefit, wear only a fine pullover, t-shirt or blouse underneath your StormWalker jacket/vest.

Heated jackets/vests using an optional battery pack will provide heat for up to 3 hours of continuous use. Experience suggests that you will get the best results from your StormWalker by switching the battery OFF after approximately 15 – 20 minutes, as the heat generated from your muscles will be sufficient to keep you warm. Turn the battery ON at least 5 minutes prior to entering a cold environment for comfort and battery conservation purposes.

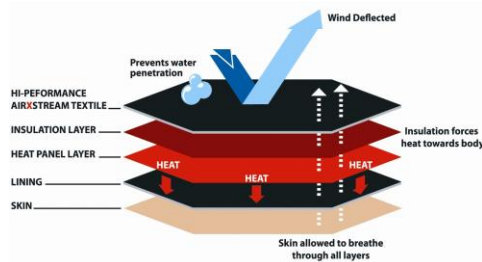

## SAFE OPERATIONS AND SAFETY FEATURES

The FabRoc® heating system has been designed for safe and reliable use. It has been tested to comply with European safety regulations and has been marked with the CE seal of approval. Safety devices are included to ensure the unit is rendered safe, even under faulty conditions. **DO NOT** replace or interfere with the electrical components in the heated jacket/vest, the battery or the charger unit. **DO NOT attempt to open the sealed battery unit.** Batteries should be discarded in accordance to local governmental regulations.

## CLEANING INSTRUCTIONS

Remove the batteries from your heated jacket. Hand wash the garment in warm water using any commercial liquid soap product and rinse thoroughly. It is inadvisable to use fabric conditioner, biological powders or strong detergents. DO NOT dry clean. It is recommended to drip or line dry the jacket/vest.

## WARRANTY

Every heated jacket/vest has a one-year warranty covering all electronic and mechanical failures. In the unlikely event that any part should fail within the first year, return it to us and we will repair or replace it free of charge. **Note: The warranty does not cover intentional alterations, accidental damage or improper cleaning.**

## TROUBLESHOOTING

### What happens if my heated jacket/vest is torn?

1. **DO NOT** attempt to replace or interfere with the electrical components in the heated jacket/vest.
2. Return the garment to *exo<sup>2</sup> The Heat Inside* for repair.

 
### What happens if my heated jacket does not get warm?

First, with the battery completely removed from the jacket/vest, plug your battery into the charger that is in turn plugged into a working electrical outlet. If the red light on the charger comes on and stays on, the battery needs to be recharged.

If the battery is charged, confirm it is properly fitted to the plug (which connects the battery to the FABROC™ panels) and the battery's LED is showing green when switched on.

**NEVER LEAVE BATTERIES THAT ARE CHARGING UNATTENDED!  
DO NOT WEAR YOUR STORMWALKER JACKET/VEST WHILE CHARGING THE BATTERY!  
KEEP BATTERIES AWAY FROM WATER!**

Should you have any questions about your heated products, please contact:

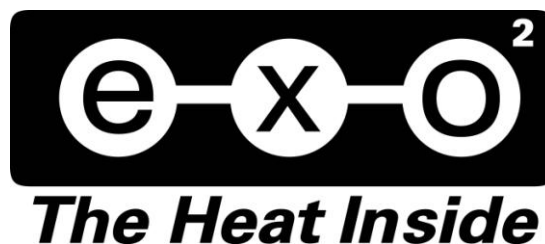

### Customer Service

*exo<sup>2</sup> The Heat Inside*, NA, LLC  
300 Lester Mill Road  
Suite 220  
Locust Grove, GA 30248

TEL: 1-877-exo2-HEAT  
WEB: [www.exo2theheatinside.com](http://www.exo2theheatinside.com)  
E-mail: [info@exo2theheatinside.com](mailto:info@exo2theheatinside.com)