

The Heat Inside

StormRider Temperature Controller USER INSTRUCTIONS

WELCOME

Your high performance StormRider Temperature Controller has been designed to promote flexible enjoyment of **exo²** heated gear when you choose to power your products with a direct 12 volt connection.



PRODUCT CONTENTS

- **exo²** StormRider Controller

INSTALLATION

The StormRider Controller is easy to mount and operate. The controller mount is designed to fit onto the existing clutch cable mount. Simply remove the top bolt from the clutch mount, pass it through the mounting plate and then refit the bolt back onto the clutch mount. The StormRider Controller can also be mounted to the frame, fairing or any other part of the bike which promotes safe operation of the vehicle.

The StormRider Controller connects to the battery via an inline 10 Amp fuse. The fused line is connected to the motorcycle battery positive terminal and the other connected to the battery negative terminal. The StormRider controller has an **ON / OFF** switch and a digital readout. The LED readout varies from 0 – 9 (0 = OFF (No Power), 1 = 50% Power and 9 = 100% Power). When first switched ON, the controller will default to the top level 9 (100% power) for fast warm up. The selector button on the front will cycle the power level to the desired setting. **THE CONTROLLER'S POSITIVE AND NEGATIVE LEADS MUST BE CONNECTED TO THE CORRESPONDING BATTERY TERMINALS TO INSURE PROPER OPERATION. THE FREQUENCY GENERATED BY ALTERNATIVE CONNECTIONS WILL INTEREFERE WITH THE OPERATION OF THE CONTROLLER AND COULD VOID THE WARRANTY.**

DO NOT REMOVE THE CONTROLLER'S BACKING PLATE FOR ANY REASON, AT ANY TIME.

WARRANTY


Every controller has a one-year warranty covering all electronic and mechanical failures. In the unlikely event that any part should fail within the first year, return it to us and we will repair or replace it free of charge. **Note: The warranty is void if alterations of any kind are made to the controller and does not cover accidental damage or improper cleaning.**

TROUBLESHOOTING

What happens if my StormRider Controller does not work?

1. **DO NOT** attempt to replace or interfere with the electrical components of the controller.
2. Call **exo²** at **877-exo2-HEAT** (877-396-2432) or email us at service@exo2theheatinside.com to obtain a Return Merchandise Authorization Number (RMA#).
3. Return the unit to **exo² The Heat Inside** as instructed.

Should you have any questions about your heated products or accessories, please contact:

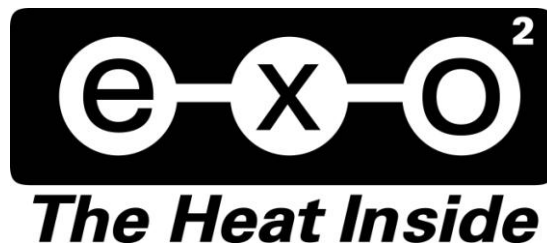

Customer Service

exo² The Heat Inside, NA, LLC

300 Lester Mill Road

Suite 220

Locust Grove, GA 30248

TEL: 1-877-exo2-HEAT

WEB: www.exo2theheatinside.com

E-mail: service@exo2theheatinside.com