

The Heat Inside

***StormWalker* HEATED JACKET/VEST
USER INSTRUCTIONS**

WELCOME

Your high performance StormWalker heated jacket/vest powered by FabRoc™ Heat Technology by EXO2 has been designed to provide you with warmth where and when you need it, whatever the weather.

FabRoc™, a revolutionary material invented for use in the aerospace industry, is extremely efficient in generating heat from a low voltage source. FabRoc™ panels are sewn into your StormWalker to provide direct heat to your body in certain key areas that will transfer warmth throughout.

StormWalker FabRoc™ panels are pre-set to a maximum surface temperature of 110°F. It is not possible to 'overheat' FabRoc™ as it automatically uses less power as it reaches its operating temperature, a unique property that ensures the material is intrinsically safe.



PRODUCT CONTENTS


- EXO2 StormWalker heated jacket or vest
- Fused Power Unit Cable
- FabRoc™ panels sewn into the garment
- Portable battery pack (Optional Accessory)
- Battery charger & power cord (Optional Accessory)

EXO2 *The Heat Inside*, NA, LLC
300 Lester Mill Road | Suite 220 | Locust Grove, GA 30248
1-877-EXO2-HEAT | www.exo2.com | service@exo2.com

USING THE BATTERY

REMOVE THE CONNECTING CABLES FROM THE POCKET.

1. Insert the small 1.3mm DC plug into the battery socket.
2. Use the **ON / UP** button to turn the battery on and to select the desired power (heat) level. Follow the instructions on the battery label to adjust power level up or down and to monitoring the remaining battery life.

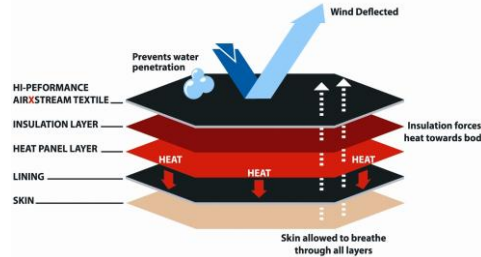

CHARGING THE BATTERY

1. Remove the battery pack from the jacket/vest.
2. Connect the charger unit to the battery socket. (The charger should be connected to the battery before inserting the power cord into the wall outlet).
3. Plug the charger into the wall outlet.

The red light on the front of the charger will light up when the battery is being charged. Depleted battery packs will take approximately 3 hours to fully recharge. You can monitor the charge level 1-9 (9 being fully charged) throughout the charging process. It is not necessary to allow the battery to full deplete or be fully charged to use the battery. When the battery is completely charged, the system allows no further current to enter the battery. When fully charged, the red LED on the charger light will turn to green and the battery LED will display '9'.

The charger unit supplied has been chosen specifically for the EXO2 battery packs. **No other charger should be used. The use of any other charger unit is dangerous, may cause injury and will void the warranty.**

GETTING THE BEST RESULTS

Although the battery has been charged and checked, we recommend that you charge it for at least 3 hours prior to first use. The closer the FabRoc™ panels are to your skin, the more heat you will feel. For maximum benefit, wear only a fine pullover, t-shirt or blouse underneath your StormWalker jacket/vest.

Heated jackets/vests using an optional battery pack will provide heat for up to 3 hours of continuous use on battery Level 5, up to 6 hours on battery Level 1. Most customers tell us that battery Level 3 gives them the best combination of desired heat and battery life. Turn the battery ON Level 5 at least 5 minutes prior to entering a cold environment and then dial in the desired heat thereafter to meet your needs and requirements.

SAFE OPERATIONS AND SAFETY FEATURES

The FabRoc™ heating system has been designed for safe and reliable use. It has been tested to comply with US safety regulations and has been marked with the CE seal of approval. Safety devices are included to ensure the unit is rendered safe, even under faulty conditions. **DO NOT** replace or interfere with the electrical components in the heated jacket/vest, the battery or the charger unit. **DO NOT attempt to open the sealed battery unit.** Batteries should be discarded in accordance to local governmental regulations.

CLEANING INSTRUCTIONS

Remove the batteries from your heated vest/jacket. Hand wash the garment in warm water using any commercial liquid soap product and rinse thoroughly. It is inadvisable to use fabric conditioner, biological powders or strong detergents. **DO NOT** dry clean. It is recommended to drip or line dry the vest/jacket.

WARRANTY

Every heated vest/jacket has a one-year warranty covering all electronic and mechanical failures. In the unlikely event that any part should fail within the first year, return it to us and we will repair or replace it free of charge. **Note: The warranty does not cover intentional alterations, accidental damage or improper cleaning.**

TROUBLESHOOTING

What happens if my heated jacket/vest is torn?

1. **DO NOT** attempt to replace or interfere with the electrical components in the heated jacket/vest.
2. Return the garment to EXO2 for repair.

What happens if my heated jacket/vest does not get warm?


First, ensure that the battery used is charged (per the previously mentioned instructions). If the red light on the charger comes on and stays on, and/or the LED on the battery reads '0' or '1', the battery needs to be recharged.

If the battery is charged, confirm the jacket/vest cable is properly fitted into the battery and the battery indicates the selected heat level.

If it still does not heat, call EXO2 Customer Service at 877-396-2432.

**NEVER LEAVE BATTERIES THAT ARE CHARGING UNATTENDED!
KEEP BATTERIES AWAY FROM WATER!**

Should you have any questions about your heated products, please contact:

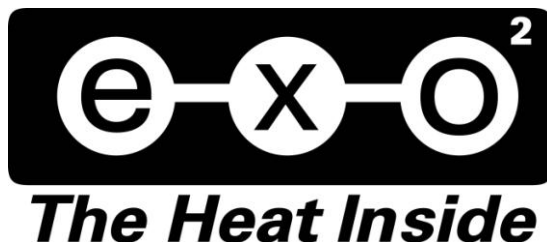

EXO2 The Heat Inside, NA, LLC
300 Lester Mill Road | Suite 220 | Locust Grove, GA 30248
1-877-EXO2-HEAT | www.exo2.com | service@exo2.com